

## Garantee:

UZIN provides a guarantee of 5 years on all the characteristics guaranteed in the fitting instructions.

- When laying the floor covering, take the generally accepted rules of the trade and technology and the respective, valid national EN standards into account

Claims under the guarantee will be excluded if:

- Unusual influences affect the product, in particular of a chemical or mechanical nature
- A utilisation or application has taken place that deviates from the installation instructions.

In all cases, some adhesion tests must be carried out on-site before carrying out the application.

## PRODUCT DATA SHEET & APPLICATION INSTRUCTIONS

High-performance tape for coarse-backed textile skirtings

# Bullran 45

Secure adhesion of whipped carpet skirtings onto rough surfaces

### Product Properties / Benefits:

- ▶ High-performance adhesive for needlepunch, woven and fleece backings
- ▶ Quick and clean
- ▶ Solvent-free, clean indoor air
- ▶ Permanently flexible
- ▶ Easy to use with Contact applicator



### Applications:

#### ▶ Suitable carpet skirting:

- with jute backing
- with synthetic double backs (SDR), including coarse
- with textile action backs (TR)
- with latex foam backs
- from needle punch
- from Kugelgarn
- from woven textile floor coverings

#### ▶ Suitable walls:

- Breeze/plaster
- Brickwork
- Metal (untreated)
- Painted
- Synthetic material
- Wood
- Concrete
- Ceramics
- Plasterwork (primed)
- Wallpaper\*
- Filled (primed)

#### ▶ Not guaranteed:

- Carpet skirting with PVC and PU backs
- Wooden strips
- Dirt trap runners
- PVC soft skirting boards
- Aluminium skirting
- Core skirting boards

\* see „Preparation“

for whipped carpet skirtings 50 – 60 mm  
ON surfaces with up to 3 mm deep texture

### Technical Data:

Special acrylic adhesive

Will not dry out or become brittle

Application temperature from + 15 °C

Temperature resistant from – 40 °C to + 140 °C (when installed)

Shelf-life min. 2 years in original packaging; store protected from direct sunlight

Do not place rolls on to the cut surfaces without adhesive-resistant paper washers inbetween

## APPLICATION INSTRUCTIONS

### Preparation:

- ▶ Preparation of the sub-surface: The sub-surface must be dry, hard, flat, able to be walked on and free of grease, dust and silicone, in accordance with the applicable, valid national standard EN.
- ▶ Wallpaper: must be firmly glued into place.
- ▶ Binding the dust: any dust must be consolidated with a solvent-free primer.

### What you need:

- ▶ Bullran 45, rubber hammer, carpet knife



1

- ▶ Fit the Bullran 45 onto the back of the whipped carpet skirting



2

- ▶ Pull off the protective paper continuously
- ▶ Fit the carpet skirting free from tension and strain



3

- ▶ Tap in everywhere using the rubber hammer



4

- ▶ Before removing the protective paper, pre-bend the carpet skirting at the internal/external corners (to relieve the tension in the skirting)



### Contact applicator:

- ▶ Handling: This is a precision device, and must be protected from pressure, impacts and falls.
- ▶ Positioning: Place the unit on the floor or fit securely to a table, for example, with a screw clamp.
- ▶ Cleaning: Dab off adhesive remnants with SUPERTape 7900 or remove using sewing machine oil. Do not use any solvents, as the adhesive could smear.


1

- ▶ Fit the spacer washer (cardboard)
- ▶ Insert the roll with the protective paper, and lock



2

- ▶ Pull in whipped carpet skirting from right to left
- ▶ The whipped side against the plate of the unit
- ▶ Lock the angled stopper

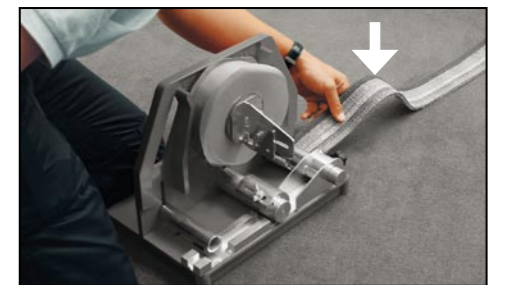


3

- ▶ Lay the Bullran 45 over the tape guide roller
- ▶ Glue to the back of the carpet skirting



4

- ▶ A) Adjust the tape guide roller
- ▶ B) Adjust the pressure roller
- ▶ Pull the carpet skirting through the applicator

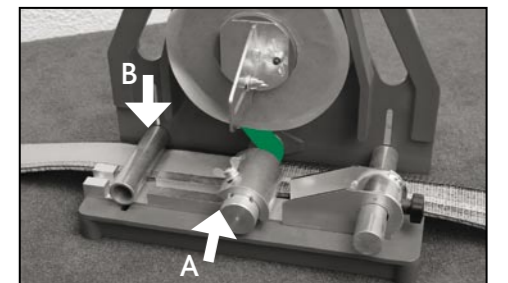

5

- ▶ Butt up the next carpet skirting without a gap
- ▶ Continually pull through the Contact applicator

