

Guarantee:

UZIN and DÖLLKEN guarantee all the characteristics stated in the installation instructions for a period of 5 years.

- Please comply with the generally accepted rules of the trade and the technology for the laying of the floor covering and the respective and the relevant national standard EN into account.

The warranty will not apply if:

- unusual influences, and in particular those of a chemical or mechanical type, affect the product
- a type of use or application is used that differs from the fitting instructions

In all cases, some adhesive tests must be carried out on-site before carrying out the application.

PRODUCT DATA SHEET & APPLICATION INSTRUCTIONS

Special tape for DÖLLKEN soft coved skirting WL 50 life

Pomur 46

Secure gluing DÖLLKEN soft coved skirting WL 50 life

Product Properties / Benefits:

- ▶ DÖLLKEN-UZIN system guarantee
- ▶ 3 – 5 times faster
- ▶ No pre-fitting and priming
- ▶ Does not become brittle; permanent and reliable adhesion
- ▶ Solvent-free

Applications:

- ▶ Suitable DÖLLKEN flexible skirting boards:
 - DÖLLKEN flexible skirting board WL 50 life (free of chlorine and plasticiser)

▶ Suitable walls:

- Breeze/plaster
- Brickwork
- Metal (untreated)
- Painted
- Synthetic material
- Wood
- Concrete
- Ceramics
- Plasterwork (primed)
- Wallpaper*
- Filled (primed)

* see „Preparation“



for < DÖLLKEN WL 50 life flexible skirting boards
ON surfaces with up to 1 mm even surface texture

Technical Data:

Special acrylic adhesive

Will not dry out or become brittle

Application temperature from + 15 °C

Temperature resistant from – 40 °C to + 140 °C (when installed)

Shelf-life min. 2 years in original packaging; store protected from direct sunlight

Do not place rolls without adhesive-resistant paper onto cut surfaces


APPLICATION INSTRUCTIONS

Preparation:

- ▶ Acclimatisation: Allow the WL 50 life (unpacked) & Pomur 46 to acclimatize in the room for 24 hours at a minimum of 15 °C for 24 hours.
- ▶ Sub-surface: The sub-surface must be dry, hard, capable of bearing weight, flat and free of grease, dust and silicon, according to the respective valid national standard EN. The floor covering must be glued flat to the sub-surface at the edges.
- ▶ Wallpaper: must be cut back or removed from a height that would cover the skirting, or must be permanently and securely glued down.
- ▶ Dust bonding: Bind the dust with a solvent-free, film-forming coat of dispersion paint.
- ▶ Cleaning the floor covering: Always vacuum dust from the floor covering and fabric residues from the textile floor coverings so that the adhesive force of the Pomur 46 will not be impaired.

What you need:

- ▶ Pomur 46, carpet knife, rubber hammer, stair iron, pressure roller

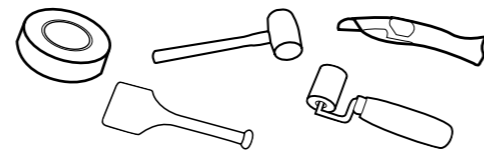

1

- ▶ Please note the instructions for the preparation
- ▶ Remove any dust from the sub-surface in the installation area
- ▶ Lay the Pomur 46 on the adhesive-repellent paper washer



2

- ▶ Apply the Pomur 46 to the wall flush to the floor
- ▶ Tap in the Pomur 46 well using the rubber hammer or rub in well with the stair iron. Ensure an optimal connection between the adhesive and the sub-surface



3

- ▶ Pull away the protective paper step-by-step in the working area up to approx 40 cm before the corner
- ▶ Apply the WL 50 life up to approx. 40 cm before the corner, free of any tension



4

- ▶ Tap in all of the WL 50 life with the rubber hammer or roll it all in with the pressure roller



5

- ▶ Mark any outer corners on the back of the skirting
- ▶ Pre-shape and hammer the outer corners so that no tension can arise
- ▶ Stretch the lower lip (edge cover) several times with the fingers in the longitudinal direction in the pre-shaped area
- ▶ Pull of the protective paper in the area of the corner



6

- ▶ After the pre-shaping and the stretching of the lip, fit the WL 50 life around the outer corner free of tension and stress without cutting it, and hammer in all over with the rubber hammer or roll in all over with the pressure roller.
- ▶ After fitting the WL 50 life, slightly warm the pre-shaped area of the outer corner with a hair dryer to prevent tensions appearing or fracturing of the skirting.



7

- ▶ It is preferable to carry out the jointing of the skirting in the inner corners (if this is not possible, use the solder axe)



Important: Fit the WL 50 life free of any tension!